

TI-P164-02 CMGT Issue 13

# Fig 12 Bronze Strainers

# Description

The Fig 12 is a bronze screwed Y-type strainer. The standard stainless steel screen is 0.8 mm perforations. As options, other perforations and mesh sizes are available as well as monel screens. The strainer cap can be drilled and tapped for blowdown and drain valves if required.

## Standards

This product fully complies with the requirements of the European

Pressure Equipment Directive 2014/68/EU and carry the CE mark

when so required.


## Certification

This product is available with a manufacturer's Typical Test Report for the body and cap.

**Note:** All certifications/inspections requirements must be stated at the time of order placement.

# Sizes and pipe connections

Fig 12 Bronze ½", ¾", 1", 1½", 1½", 2" and 2½" Connections: Screwed BSP T Rp (ISO 7-1) or NPT

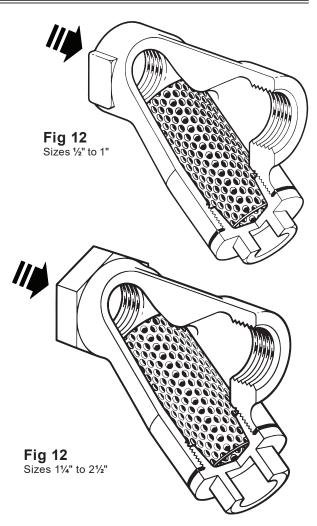


# **Optional extras**

	Stainlaga ataal	Perforations	1.6, 3.0 mm
Strainer screens	Stainless steel	Mesh	40, 100, 200
	Manal	Perforations	0.8, 3.0 mm
	Monel	Mesh	100
Blowdown or drain valve connections The cap can be drilled to the following sizes to enable a blowdown or drain valve to be fitted at extra cost.	Strainer size	Blowdown valve	Drain valve
	1⁄2"	1/4"	1/4"
	<sup>3</sup> ⁄4" and 1"	1/2"	1/2"
	1¼" and 1½"	1"	1
	2" and 21⁄2"	1¼"	1¼"

# Pressure/temperature limits


The product **must not** be used in this region.

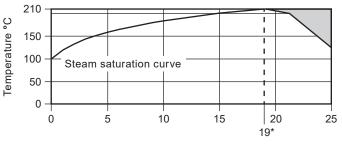

Pressure bar g

Body design conditions	PN25	
PMA Maximum allowable pressure	25 bar g	
TMA Maximum allowable temperature	210 °C	
Minimum allowable temperature	-198 °C	
*PMO Maximum operating pressure for saturated steam service		
Product is safe for use under full vacuum conditions		
Designed for a maximum cold hydraulic test pressure of:		

# **Materials**

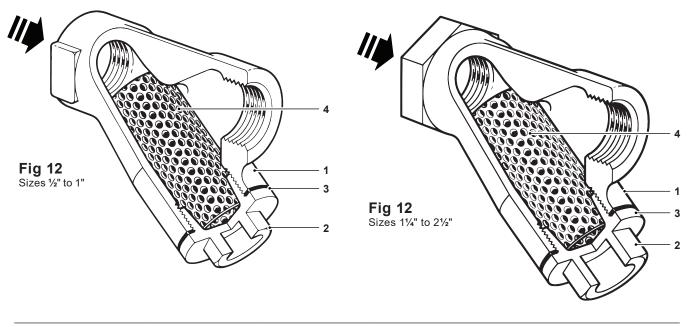

No	Part		Material	
1	Body	1⁄2" to 21⁄2"	Bronze	EN 1982 CC491K
2	Сар		Brass	EN 12165 CW617N
3	Cap gasket		Reinforced exfoliated graphite	
4	Strainer screen		Stainless steel	ASTM A240 316 L



# Kv values


Size	1/2"	3/4"	1"	11⁄4"	11⁄2"	2"	<b>2</b> ½"
Perforations 0.8, 1.6 and 3 mm	3	6.2	11.3	26	41	68	98
Mesh 40 and 100	3	6.2	11.3	26	41	68	98
Mesh 200	3	6.2	9.3	21	33	55	78

For conversion: Cv (UK) = Kv x 0.963

Cv (US) = Kv x 1.156

# **Dimensions/weights**

(approximate) in mm and kg

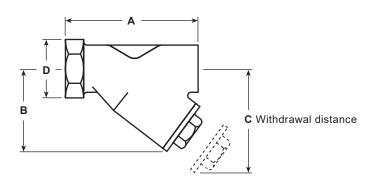

#### Bronze body

Biolize Body						
Size	А	В	С	D	Screening area cm²	Weight
1/2"	72	54	85	30 A/F	27	0.55
3/4"	82	64	110	36 A/F	43	0.70
1"	104	72	130	46 A/F	73	1.00
11⁄4"	138	100	170	52 A/F	135	1.60
1½"	150	110	190	60 A/F	164	2.10
2"	178	133	212	79 A/F	251	4.80
21/2"	207	152	240	98 A/F	327	7.70
			÷			

#### Safety information, installation and maintenance

For full details see the Installation and Maintenance Instructions (IM-S26-01) supplied with the product.

#### Installation note:

The strainer should be installed in the direction of flow, as indicated on the body. On applications involving steam or gases, the pocket should be in the horizontal plane. On liquid systems the pocket should point downwards. Suitable isolation valves must be installed to allow for safe maintenance and trap replacement.

#### Maintenance note:

Maintenance can be completed with the strainer in the pipeline, once the safety procedures have been observed. It is recommended that a new gasket is used whenever maintenance is undertaken.

### Disposal

The product is recyclable. No ecological hazard is anticipated with disposal of this product, providing due care is taken.

## How to order

**Example:** 1 off Spirax Sarco 1<sup>1</sup>/<sub>2</sub>" Fig 12 bronze strainer with screwed BSP T Rp (ISO 7-1) connections and stainless steel screen having 0.8 mm perforations.



# Spare parts

The spare parts available are shown in solid outline. Parts drawn in a grey line are not supplied as spares.

## Available spares

Strainer screen (state material, size of perforation or mesh and size of strainer)	4
Cap gasket (packet of 3)	3

#### How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the size and type of strainer and perforations or mesh required.

Example: 1 - Stainless steel strainer screen having 0.8 mm perforations for a <sup>3</sup>/<sub>4</sub>" Spirax Sarco Fig 12 strainer.

# Fig 12 Sizes ½" to 1"


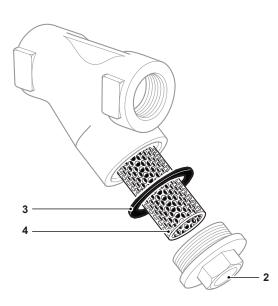


Fig 12 Sizes 1¼" to 2½"



# **Recommended tightening torques**

ltem	Size	Qty	$\bigcup^{\leftarrow}$	or mm	N m
2	1/2" 3/4" 1" 11/4" 11/2" 2" 21/2"	1	22 A/F 27 A/F 27 A/F 41 A/F 41 A/F 55 A/F 55 A/F	M28 M32 M42 M56 M60 M72 3¼"-16 UNS	35 - 40 42 - 48 70 - 80 124 - 144 164 - 184 234 - 264 300 - 330

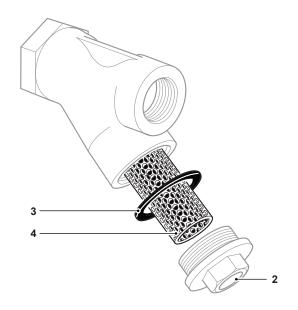